



J5, J6, J7
Set aside Interface

J1
Unconnect: Parallel Mode
Connect: Serial Mode

J2
Connect: Square Wave Enable
Unconnect: Square Wave Disable, Adjust R11 For Duty Cycle

J4
Square Wave 2

J3
Unconnect: Connection Return Potentiometer or J5, Adjust Voltage
Connect: From R1 Get Current

Title	Sheet Number	Sheet of
AD9850	1	1
REV: 1.0	1	1