

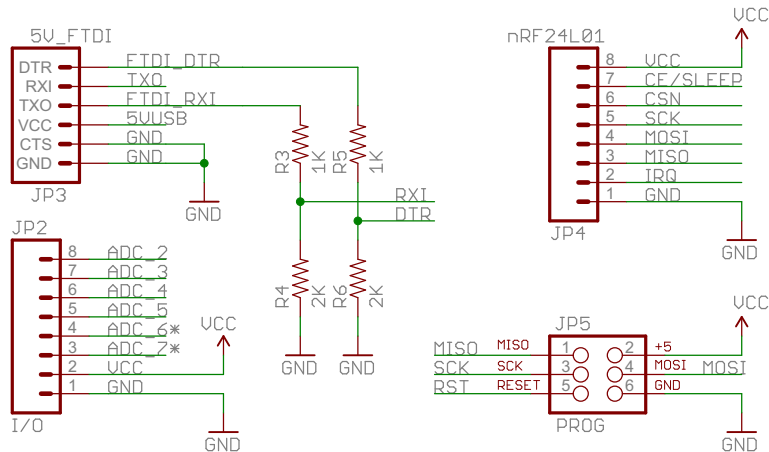
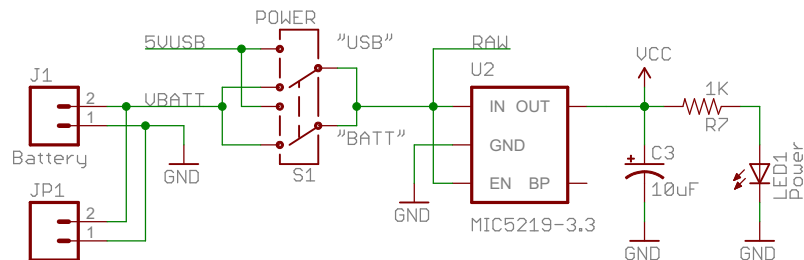
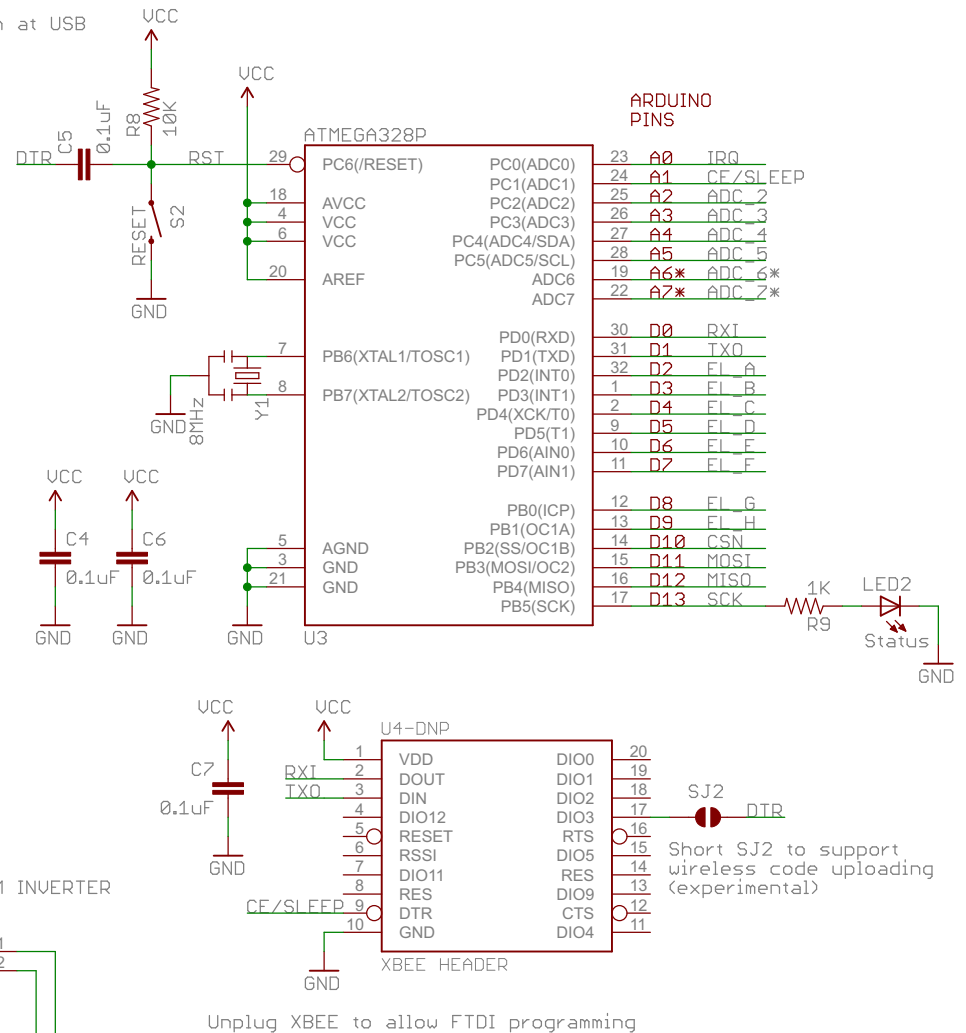


3.5V - 16V to operate ATmega
 > 4.8V if using LM317 regulator at default 3.3V DC output to inverter
 > (DC to inverter + 1.5V) if using LM317 regulator at a custom voltage
 Note that input voltage can be passed directly to inverter by closing SJ1
 Warning: if SJ1 is closed, inverter will see 5V with FTDI plugged in and switch at USB

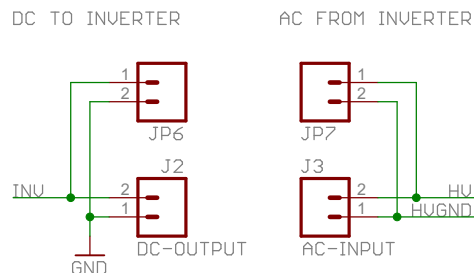

RA,RB pads for user-supplied PTH resistors
to change regulator output voltage
(remove SMD resistors R1,R2 first)
See LM317 datasheet for values

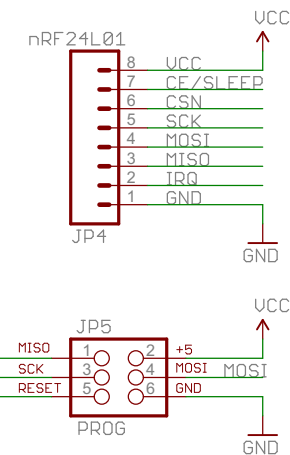

SFE

