




inside™

tinyTILE has been designed in collaboration with Intel

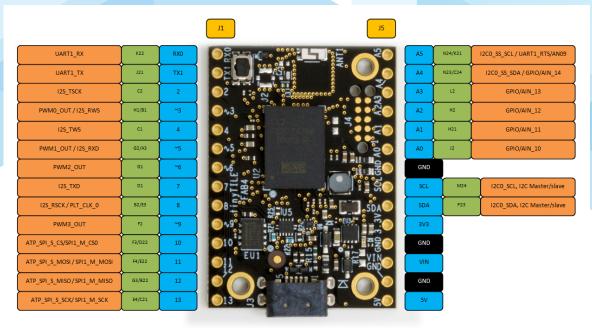

 \wedge

WARNING! Applying voltages >3v3 to any I/O pins may cause irreversible damage to the circuit and/or the Curie™ module.

J1	Board Signal	J5 Board		d Signal	
RX<-0	RXD1/SS9_3V_IO0	A5	AD09/SS1_3V_AD5	SCL0_SS_3V_AD5	I2C Master
TX->1	TXD1/SS8_3V_IO1	A4	AD14/SS6_3V_AD4	SDA0_SS_3V_AD4	Connection
2	I2S_TSCK/I018_3V_I02	A3	AD13/SS5_3V_AD3		
~3	PWM0/SS10_3V_IO3	A2	AD12/SS4_3V_AD2		
4	I2S_TWS/I019_3V_I04	A1	AD11/SS3_3V_AD1		
~5	PWM1/SS11_3V_IO5	AO	AD10/SS2_3V_AD0		
~6	PWM2/SS12_3V_IO6	GND	GND		
7	I2S_TXD/IO20_3V_IO7	I2C0_SCL	I2CO_SCL		
8	MISO1/IO9_3V_IO8	I2C0_SDA	I2CO_SDA	I2C Slave Connection	
~9	PWM3/SS13_3V_IO9	3.3V	VDD_PLAT_3P3		
10	ATPSS/IO0_3V_IO10	GND	GND		
11	ATPMOSI/IO3_3V_IO11	Vin	VIN_CONN		
12	ATPMISO/IO1_3V_IO12	GND	GND		
13	ATPSCK/IO2_3V_IO13	5V USB	USB_5P00_PWR		
	_			-	
		GND			
		PORT PIN			
		BOARD SIGNAL			
		CURIE MODULE -PHYSICAL BUMP			
		MAP			
		CURIE MODULE PIN FUNCTION			
		POWER			

