

MINI SHOOTER

Assembly guide

MOTOR-WHEEL
PLATFORM WITH
RUBBER BAND SHOOTER



PART LIST




START WITH CHARGING THE BATTERY

BATTERY CHARGING:




Rechargeable battery must be charged by adult only.

- The new battery pack needs to be charged before use.
- Connect the USB charging cable to 5V USB power source, such as a laptop.
- Connect the battery to the charger. The charger will show a red LED light when charging the battery. When the battery is fully charged, the red LED light turns off.
- To disconnect cables, hold the connectors of both cables and pull apart.
- Do not attempt to overcharge the battery.

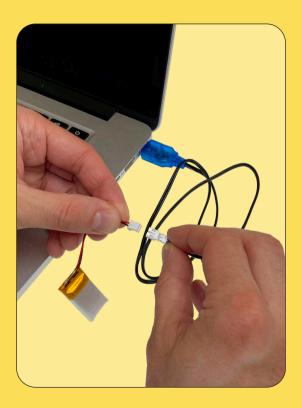

Some of the nuts (~1%) are missing threads. This is a manufacturing issue. We are trying to minimize the fault.

In the meantime, we supply extra nuts in your kit. We apologize for the in-convenience.

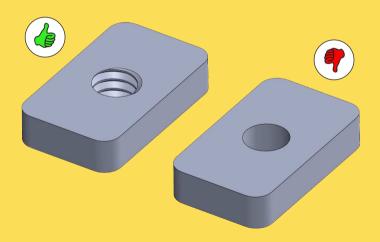

You will need in this step:






1x Beam 11 cm


4x Nut M3 6x10





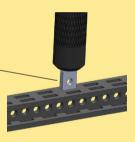


1. Use the back of the screwdriver to push in the nuts.

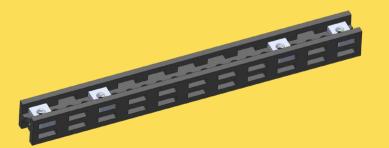



2. After entering the first slot, nuts tend to tilt. Use your thumb to push it back straight, and then again use the screwdriver to insert the nut all the way in.






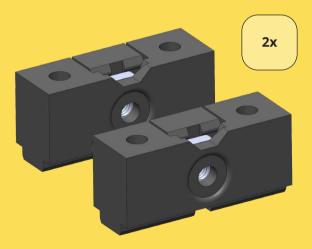


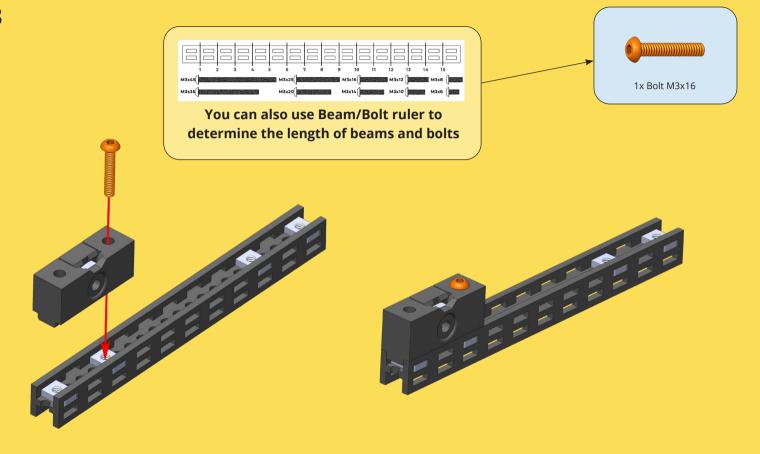

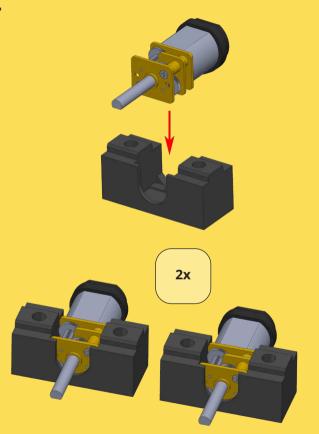




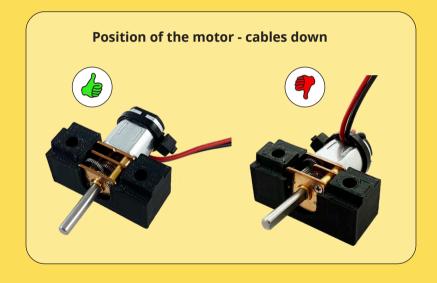


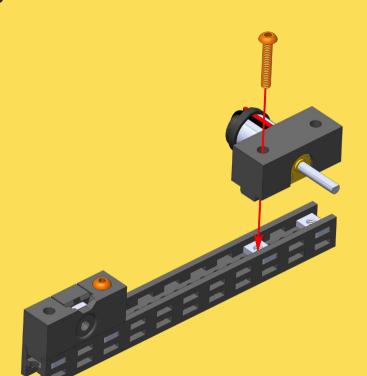



1x Bolt M3x16

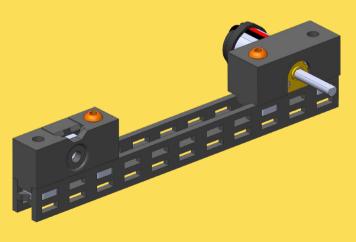


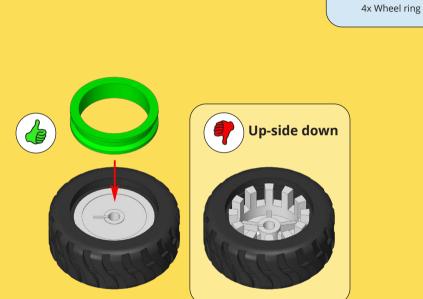





Make sure the rings sit tightly

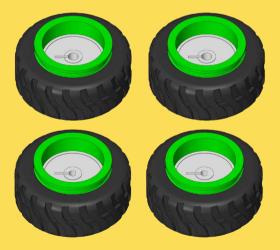








1x 43mm D-shaft wheel + Wheel ring

1x Nylon spacer 8mm

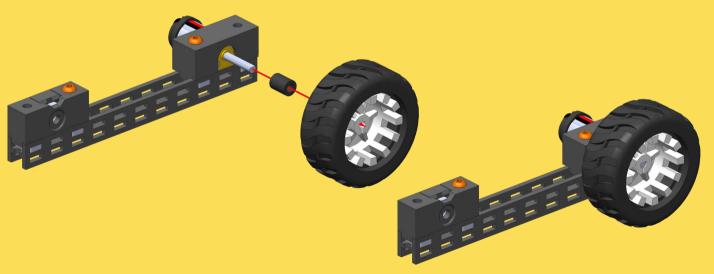











heel + 1x Nylon spacer 8mm

n 1x Shoulder bolt L8 M3x12

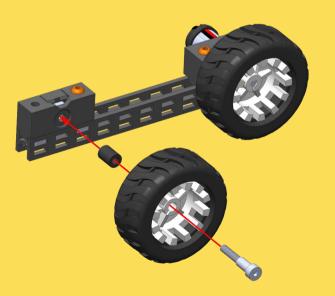







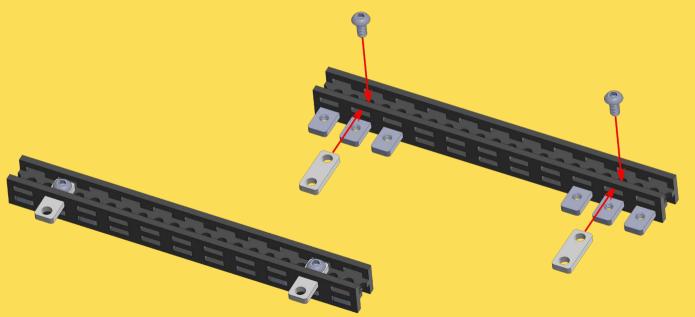




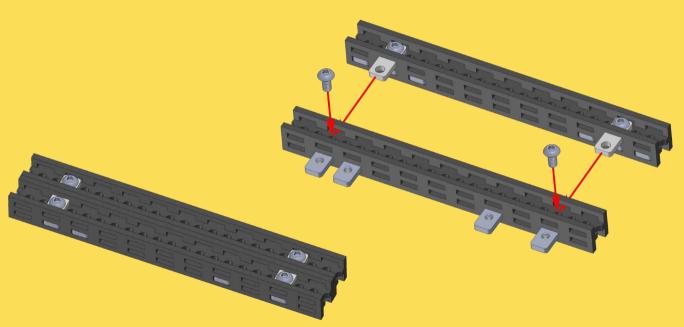





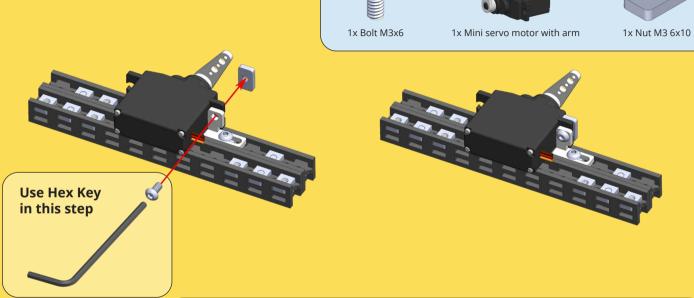



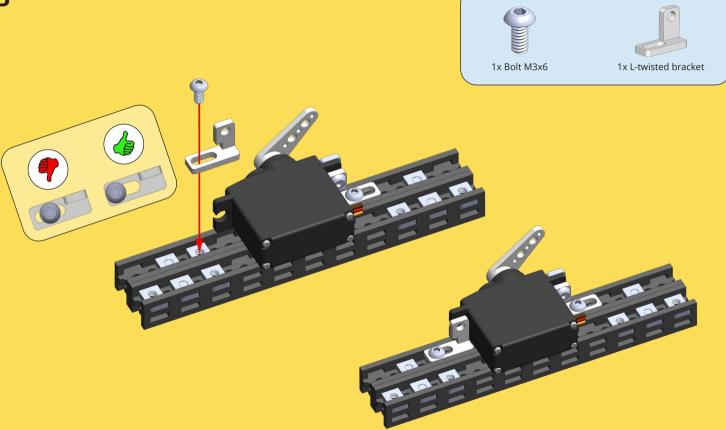

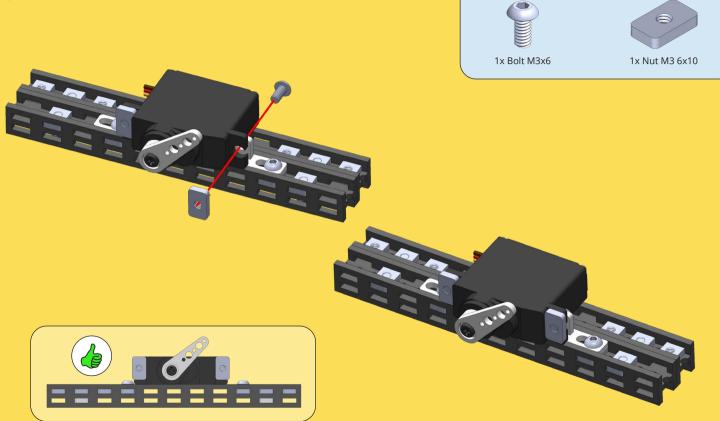

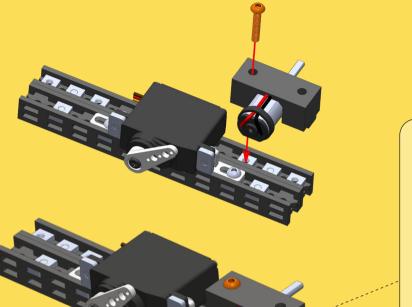








Make sure cable holder does not climb on the beam



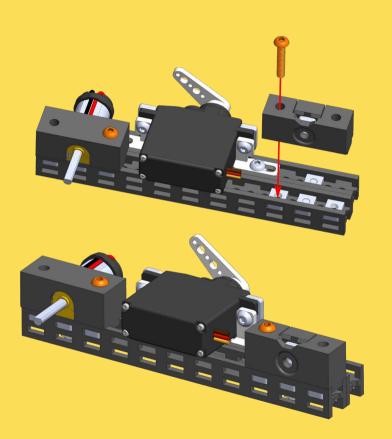

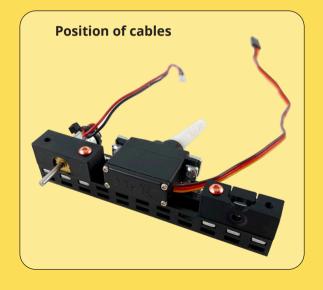

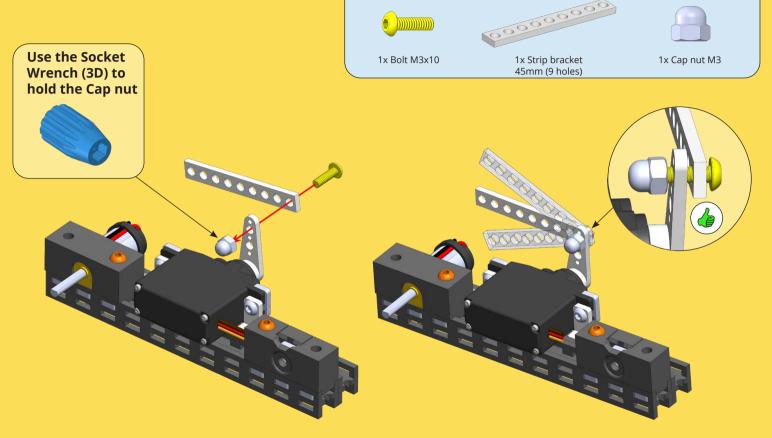








1x Nylon spacer 8mm

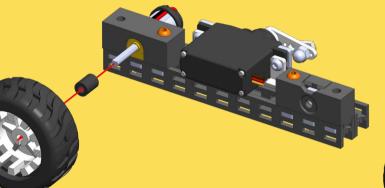


















5 cm 2x Nut M3 6x10

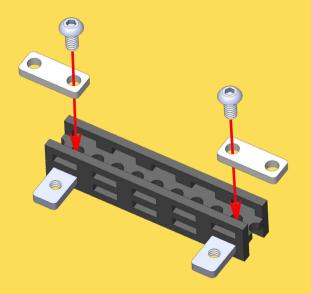


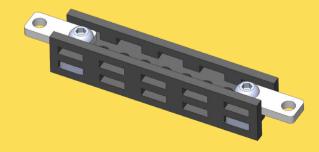




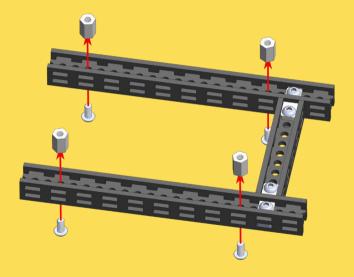  














1x L-twisted bracket


1x Beam 7 cm

2x Nut M3 6x10

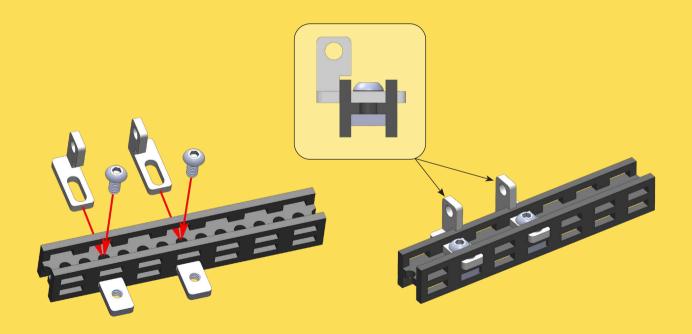

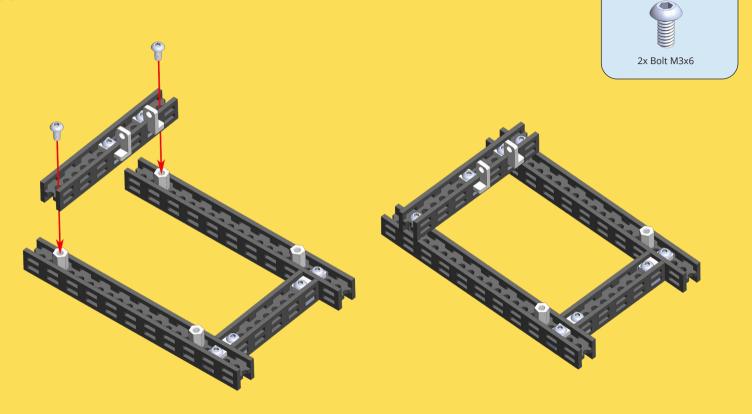

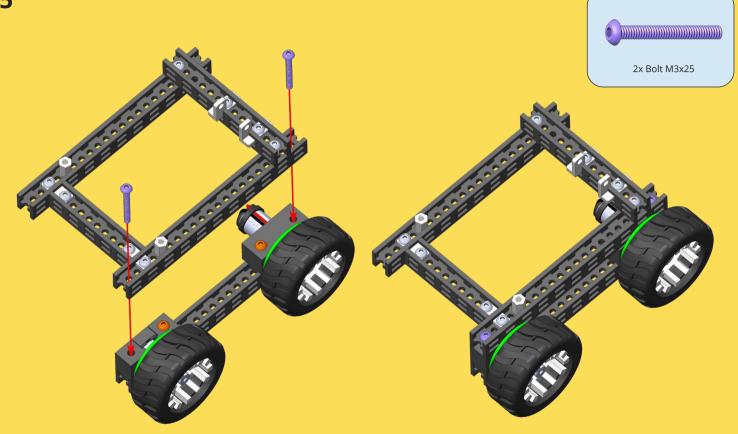

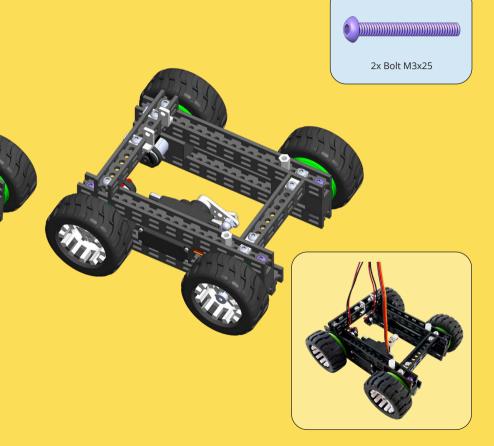














1x Pistol left half



 1x Pistol right half

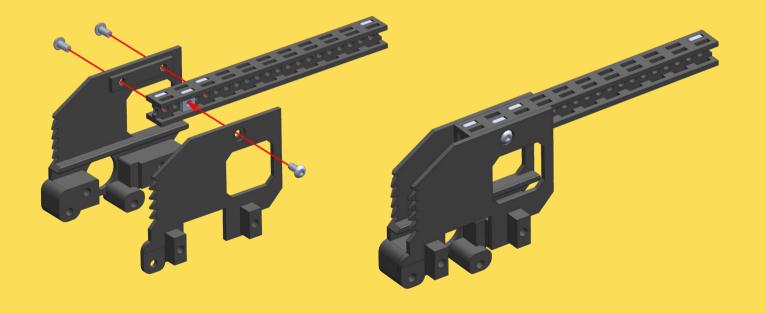



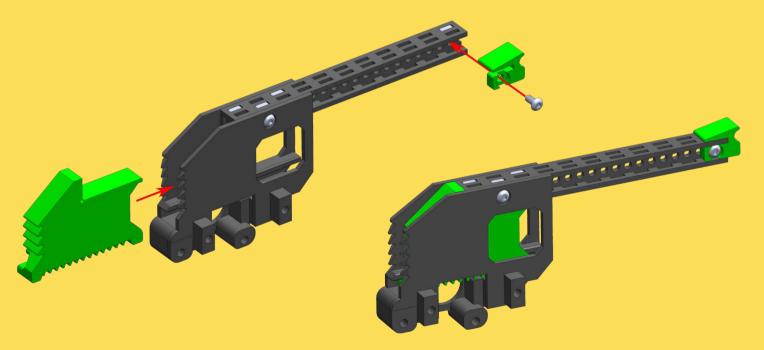









1x Bolt M2.5x8


1x Trigger gear


1x Mini servo motor

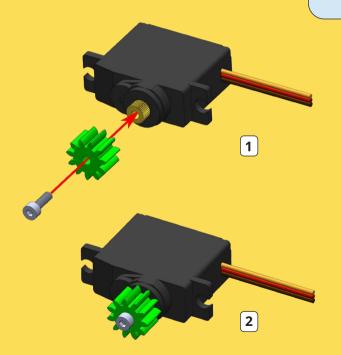

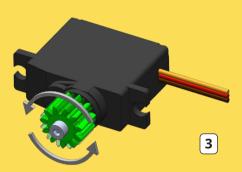

 Turn the gear counterclockwise until it stops



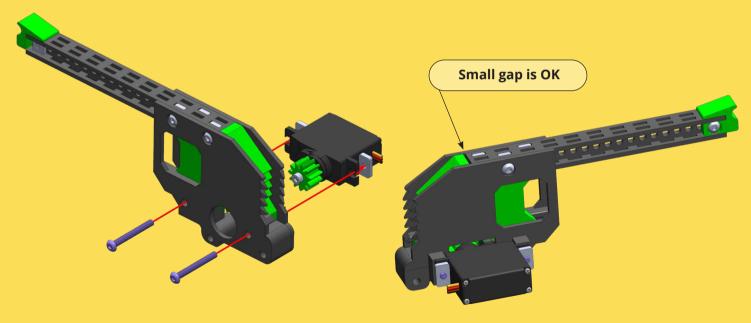









1x Bolt M3x25


1x Washer T2,5mm

 
1x Cap nut M3

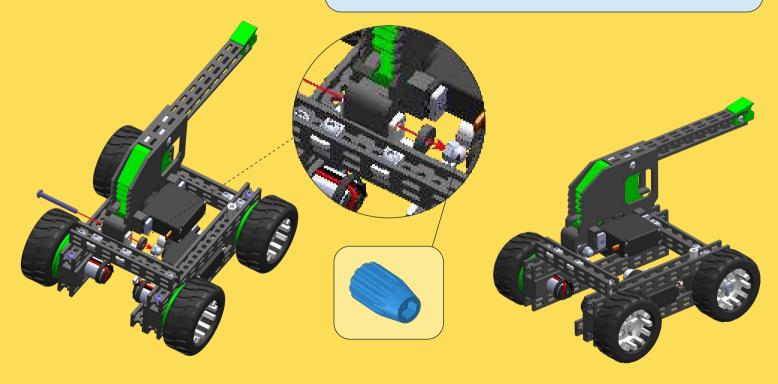





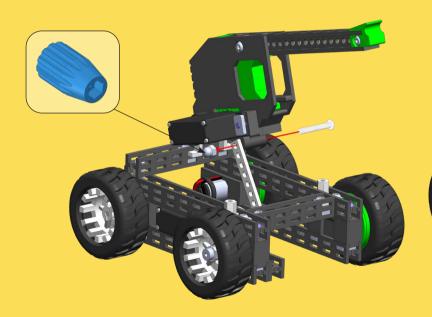

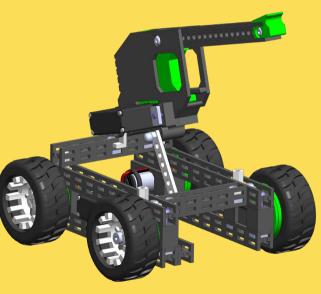





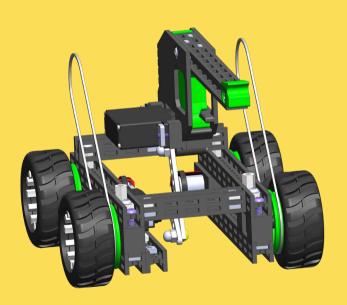

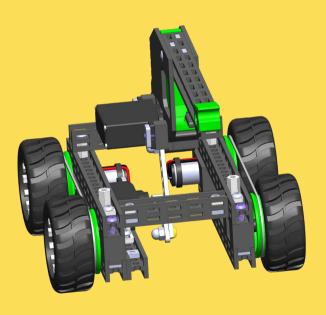





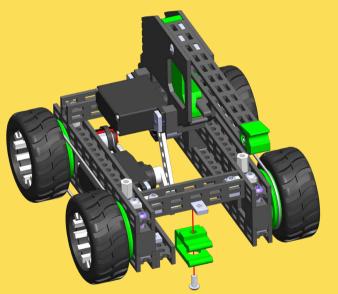


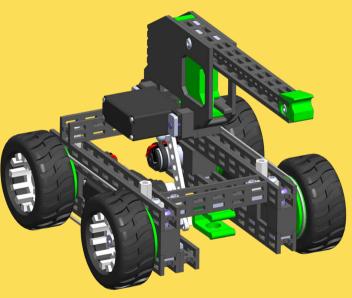



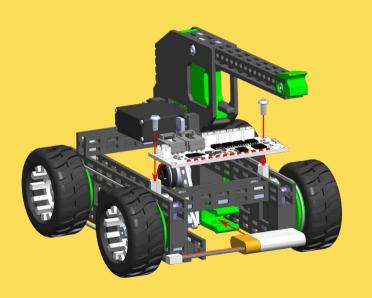

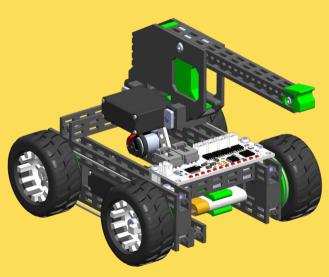


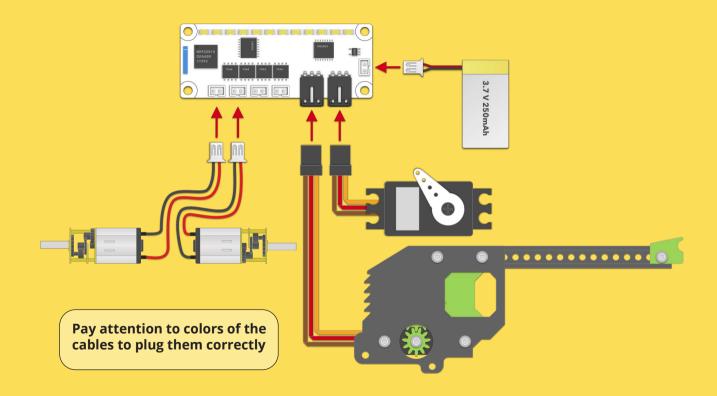



Voilà!

You have finished assembling the Mini Shooter.

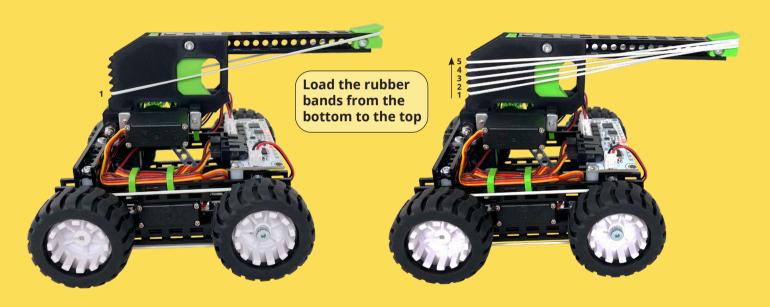

HOW TO CONTROL

Download the Totem app on your smartphone or tablet via App Store or Google Play.






Search for: Totemmaker

Or scan this code:



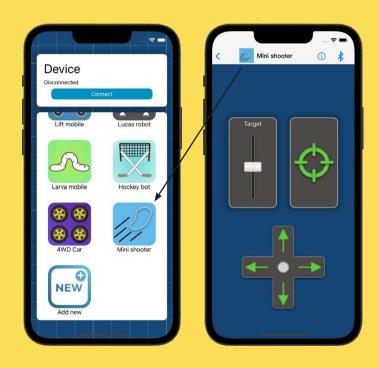

TROUBLESHOOT

Can't connect to the Mini Shooter electronics board with Totem mobile application.

- Check if Mini Shooter electronics board is powered on (LEDs should blink).
- Only one device can be connected to the Mini Shooter at a time. Reconnect the battery to reset the electronics board or disconnect with another device.
- Check if your device is running the latest version of Totem mobile application.
- Ensure that your device has Bluetooth functionality and location service (GPS) enabled and Totem mobile application has the location permission.
- · Close Totem mobile application and run it again (restart).

Servo motor doesn't spin.

Servo motor connector may be plugged in upside down. Flip it over.

LEDs are flashing when battery is not connected and motors are spined manually.

This is normal behaviour and doesn't indicate any malfunction.

None of the LEDs are flashing when battery is connected.

Battery voltage is low. Charge the battery.

First LED of light bar is flashing when battery is connected.

Battery voltage is low. Charge the battery.

Wheel motors are twitching or decelerating while driving.

Battery voltage is low. Charge the battery.

Wheel motor spin direction is incorrect.

- Check the Step 37 if motors are plugged correctly.
- Connect to Mini Shooter using Totem mobile application. Go to "Settings" and switch "DC motor pins" to "Inverted". Write changes by clicking "Save".
- A button configuration may be wrong. Reinstall Totem mobile application in order to reset all the settings.



PRECAUTIONS: ELECTRONICALLY OPERATED PRODUCT

Do not give this product to children aged 8 or below. As with all electronic products, precautions should be observed during handling and use to prevent electric shock.

Adult supervision required.

CONSUMER INFORMATION

Note to adults: to ensure that the child's play is both safe and fun, please review all operating instructions and safety rules with your child.

SAFETY WARNINGS:

- Do not pick up vehicle while in motion.
- Keep fingers, hair, and loose clothing away from rotating wheels, to avoid the injury.
- Adult supervision is required when this vehicle is being operated.
- If you stopped operating the vehicle, remember to unplug the battery, to avoid accidental operation.
- If the vehicle is dirty, please clean it with dry and soft cloth. Do not clean electronics.
- Do not expose the vehicle to high temperature, high humidity, or direct sunlight.
- Indoor use only. Do not put this product in water to avoid damaging its electronic components.
- The product is made of complex electronic circuit and electronic components, do not disassemble, or modify the circuit board.

BATTERY SAFETY INFORMATION:


- This vehicle is designed to work with provided 250 mAh 3.7V LiPo battery and charger.
- Rechargeable battery must be charged by adult only.
- Do not leave charging without supervision of adult.
- There is a risk of fire and personal injury if battery is punctured, damaged or misused.
- Do not disassemble or damage the battery pack.
- Use only the supplied 250 mAh 3.7V LiPo battery battery. Using any other battery may damage the model.
- Use only the included USB charging cable to charge the battery.
- Please check on a regular basis the wire, plug, battery, charger, and other electronic parts on the vehicle. If any damage is found, please stop using the product immediately.
- Stop charging if battery becomes hot, smells, smokes or gives off strong odour.
- Never throw batteries into fire to avoid explosion or leakage.
- Check the batteries on a regular basis to avoid leakage.
- Recycle or dispose batteries according to local laws and guidelines.


BATTERY CHARGING:



Rechargeable battery must be charged by adult only.

- The new battery pack needs to be charged before use.
- Connect the USB charging cable to 5V USB power source, such as a laptop.
- Connect the battery to the charger (see picture 1). The charger will show a red LED light when charging the battery. When the battery is fully charged, the red LED light turns off.
- To disconnect cables, hold the connectors of both cables and pull apart (see picture 2).
- Do not attempt to overcharge the battery.

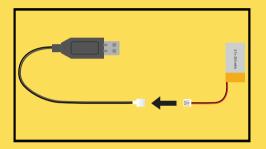

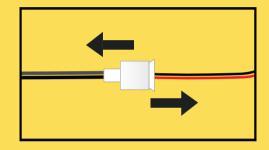

KEEP THIS INSTRUCTION MANUAL AND THE PRODUCT BOX AS IT CONTAIN IMPORTANT INFORMATION FOR FUTURE REFERENCE.

Due to the continuous product improvement, the pictures on this manual may differ slightly from the actual product. Please adhere to actual product instead.

Totem Maker names and logos are registered trademarks. All rights reserved.

www.totemmaker.net
Totem Technology, UAB
Sauletekio al. 15-709, Vilnius, 10224, Lithuania
For customer support please contact: support@totemmaker.net



CHOKING HAZARD - Small parts. Not for children under 3 years.





Discover more of Totem:



Mini Lab



Mini Trooper



Gripper Bot



Micro Lab



Young Engineer Kits



Black Spider

Find us here:

- **f** totemmaker
- 🎯 totem_maker
- 🔼 totemmaker
- totemmaker

And tag us in your post with #totemmaker

(www.totemmaker.net)