



Installation Manual

● Type : Open Frame (PCB) Type Switching Power Supply

(Families: ELP, EPP, EPS, IRM, LOP, LPP, LPS, MFM, MPM, MPQ, PD, PID, PPT, PS, PT, RPD, RPS, RPT)

● Introduction

An open frame (PCB) type switching power supply is a power supply designed to be integrated or installed into a system enclosure. Mean Well's open frame (PCB) type power supplies include on board, general PCB, green PCB, and medical PCB types.

● Installation

- (1) Before commencing any installation or maintenance work, please disconnect your system from the utility. Ensure that it cannot be re-connected inadvertently!
- (2) At least 5mm insulation distance on the bottom of the unit should be kept and a Mylar film should be added between the unit and the system. In addition, keep enough insulation distance, 10mm for general type/15mm for medical type, around the unit.
- (3) Power supplies greater than 120W may require a forced air/fan for cooling. Please refer to specifications to receive a minimum air intensity and air-flow direction.
- (4) Allow good ventilation for the unit in use to prevent it from overheating. Also, a 10-15 cm clearance must be kept when the adjacent device is a heat source.
- (5) Mounting orientations other than standard orientation or operate under high ambient temperature may increase the internal component temperature and will require a de-rating in output current. Please refer to the specification sheets to receive the optimum mounting position and information about the de-rating curve.
- (6) Recommended wires are shown as below.

AWG	18	16	14	12	10	8
Rated Current of Equipment (Amp)	6A	6-10A	10-16A	16-25A	25-32A	32-40A
Cross-section of Lead(mm ²)	0.75	1.00	1.5	2.5	4	6
Note:Current each wire carries should be de-rated to 80% of the current suggested above when using 5 or more wires connected to the unit.						

- (7) The ambient temperature derating of 3.5°C/1000m with fan less models and of 5°C/1000m with fan models for operating altitude higher than 2000m(6500ft).
- (8) Please refer to the warranty statement on MEAN WELL's website at <http://www.meanwell.com>
- (9) For any application note and IP water proof function installation caution, please refer our user manual before using. https://www.meanwell.com/Upload/PDF/LED_EN.pdf
- (10) Product Liability Disclaimer : For detailed information, please refer to <https://www.meanwell.com/serviceDisclaimer.aspx>
- (11) For other information about the products, please refer to www.meanwell.com for details.
- (12) For other information about mating housing, please refer to product specification.
- (13) For other information about soldering temperature, please refer to product specification.



Installation Manual

● **Warning / Caution !!**

- (1) Risk of electrical shock and energy hazard. All failure should be examined by a qualified technician. Please do not try to fix the power supply by yourself!
- (2) Please do not install power supplies in places with high moisture or near the water.
- (3) Please do not install power supplies in places with high ambient temperature or near fire source. Please refer to the specifications about the maximum ambient temperature limitations.
- (4) Output current and output wattage must not exceed the rated values on specifications.
- (5) The ground (FG) must be connected to earth ground.
- (6) All MW's PSUs are designed in accordance with EMC regulations and the related test reports are available by request. Since they are belong to component power supplies and will be installed inside system enclosure, when they are integrated into a system, the EMC characteristics of the end system must be re-verified again.

Manufacturer :

MEAN WELL ENTERPRISES Co., LTD.
No.28, Wuquan 3rd Rd., Wugu Dist.,
New Taipei City 24891, Taiwan
Tel: +886-2-2299-6100
Web: www.meanwell.com

Branch Office :

China

MEAN WELL (GUANGZHOU)
ENTERPRISES Co., LTD.
No.11, Jingu South Road, Huadong
Town, Huadu Distric, Guangzhou,
Gungzhou, China
Tel: +86-20-3773-7100
Web: www.meanwell.com.cn

China

SUZHOU MEAN WELL
TECHNOLOGY Co., LTD.
No.269 Changping Rd. , Huangdai
Town, Xiangcheng District
Suzhou, Jiangsu Province, China
Post Code: 215152
Tel: +86-512-6508-8600
Web: www.meanwell.cc

U.S.A.

MEAN WELL USA, INC.
44030 Fremont Blvd., Fremont,
CA 94538, U.S.A.
Tel: +1-510-683-8886
Web: www.meanwellusa.com

Europe

MEAN WELL EUROPE B.V.
Langs de Werf 8, 1185XT Amstelveen, The
Netherlands
Tel: +31-20-758-6000
Web: www.meanwell.eu

2023.11.21