

TRIANGLE FLASHER
6 LED 2 STEP
CODE 152

LEVEL 1

This circuit is the flasher light circuit. The shape is 2 triangle to overlap. This circuit is consist of 6 LEDs. Idea as light shows for model construction etc.

Technical specifications:

- power supply: 9-12VDC.
- consumption: 13-23mA max.
- adjustable speed with potentiometer.
- PCB dimensions : 1.64 x 2.13 inch.

How to works:

Multi-vibrator (TR1 and TR2) is configured as frequency generator. TR1 and TR2 will alternately one by one. If TR1 works, LED1 to LED3 will light on and LED4 to LED6 will light off. But if TR2 works, LED1 to LED3 will light off and LED4 to LED6 will light on. Speed of LED blinking is depending on VR10K, R2, R3, C1, C2. VR1 is used to adjust the speed of LED blinking. R1 and R4 are voltage drop for each LED.

PCB assembly:


Shown in Figure 3 is the assembled PCB. Starting with the lowest height components first, taking care not to short any tracks or touch the edge connector with solder. Some tracks run under components, and care should be taken not to short out these tracks. All components with axial leads should be carefully bent to fit the position on the PCB and then soldered into place. Make sure that the electrolytic capacitors are inserted the correct way around. The LED has a flat spot on the body which lines up with the line on the overlay. Now check that you really did mount them all the right way round!

Testing:

Connect the power supply 9 to 12V to circuit.

With the positive pole is connected to "+" point and the negative pole is connected to "-" point. All LEDs will alternatively light on. If you want to increase or decrease of blinking LED can be adjusted by VR1.

Figure 1. Installing the components

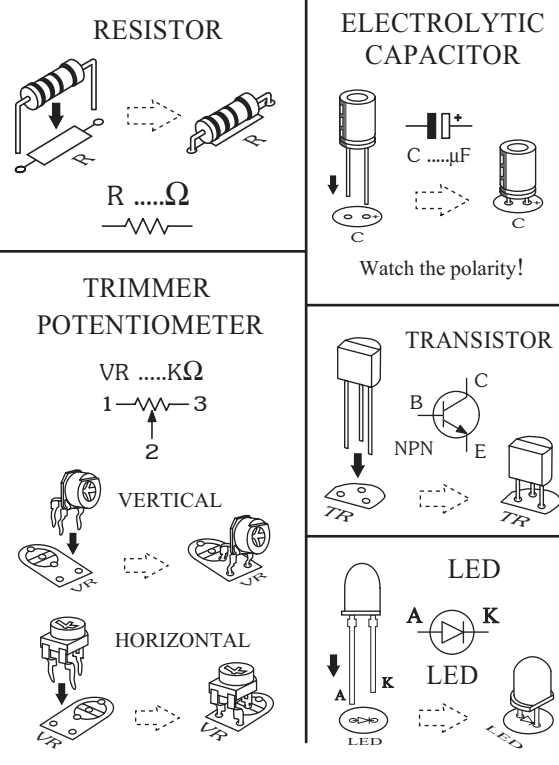

Troubleshooting:

The most problem like the fault soldering. Check all the soldering joint suspicious. If you discover the short track or the short soldering joint, re-solder at that point and check other the soldering joint. Check the position of all component on the PCB. See that there are no components missing or inserted in the wrong places. Make sure that all the polarised components have been soldered the right way round.




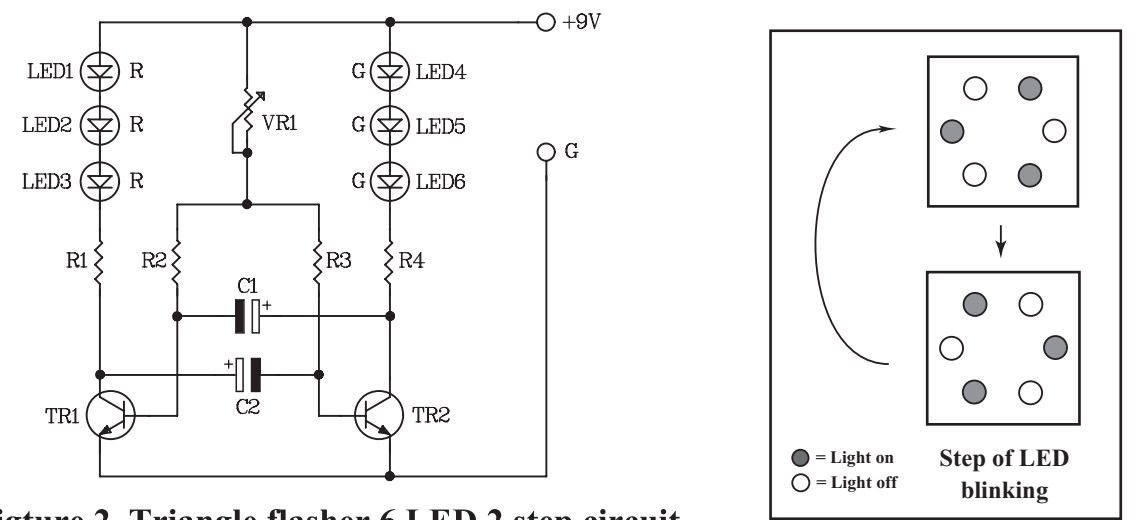


Figure 2. Triangle flasher 6 LED 2 step circuit

Figure 3. Connections

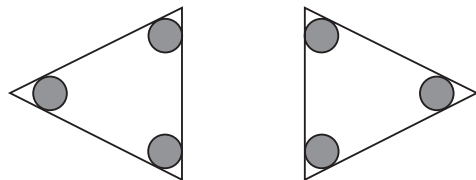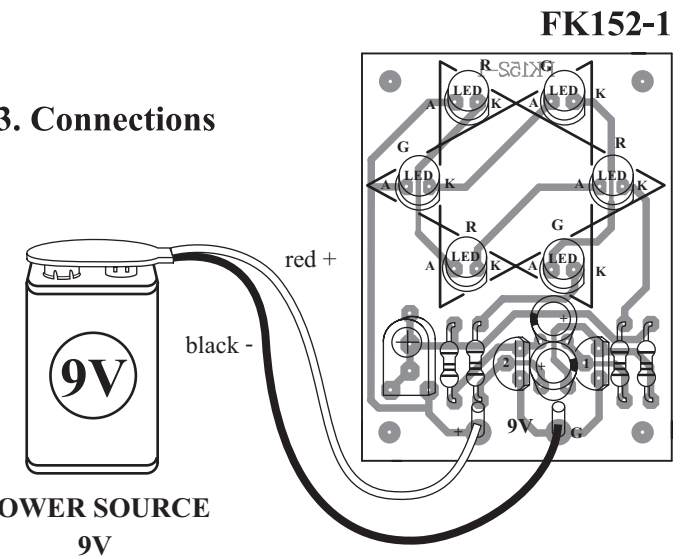

POWER SOURCE
9V

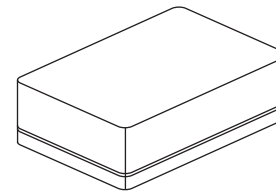

NOTE:
FUTURE BOX FB03 or FB20
are suitable for this kit.

NEW KIT SET **NEW**

CODE FK	DESCRIPTION	POWER
271	LIGHT ACTIVATE ALARM (COCK VOICE) WITH SPEAKER	3VDC
272	SPACE GUN 3 TONE WITH SPEAKER	9VDC